

CONTROL PANEL COMMANDS

SET: **TO DISPLAY TARGET SET POINT:** by pressing and releasing this key the set point is displayed for 5s.

TO MODIFY SET POINT: by holding the key pressed for at least 2s set point change mode is entered: the set point is displayed and the LEDs of the first and third digits blink. To change the value use the “**UP**” and “**DOWN**” keys. The new value can be stored either by pressing the “**SET**” key (the instrument restores temperature display) or by waiting the exit time-out to expire (15s).

▲ (**UP**): in programming mode or in “**Function Menu**” it browses the parameter codes or increases the value of the displayed variable. Hold pressed for a faster change.

TO START A FAST FREEZING CYCLE: in normal operation, by holding it pressed for 3s the fast freezing cycle is started. Such cycle can be interrupted by holding the “**UP**” key pressed for 3s.

▼ (**DOWN**): in programming mode or in “**Function Menu**” it browses the parameter codes or decreases the value of the displayed variable. Hold pressed for a faster change. **TO REVERSE THE STATE OF THE AUXILIARY OUTPUT:** In model **XR572C**, by holding it pressed for 3s the auxiliary output state is inverted.

AUX **TO REVERSE THE STATE OF THE AUXILIARY OUTPUT:** (only model **XR530D**) by holding it pressed for 3s the state of the auxiliary output is reversed.

❄ **TO START A MANUAL DEFROST:** by holding it pressed for 3s the defrost cycle is started

KEY COMBINATIONS:

▲+ ▼ **TO UNLOCK THE KEYBOARD:** when held pressed for 3s the keyboard is unlocked (see “**LOC**” function).

SET + ▼ **TO ENTER ON FUNCTION MENU:** when held pressed for 3s the Function Menu is entered.

SET + ▲ **TO RETURN TO THE ROOM TEMPERATURE DISPLAY:** programming end, return to the room temperature display.