

SET: TO DISPLAY TARGET SET POINT: by pressing and releasing this key the set point is displayed for 5s.

TO MODIFY SET POINT: by holding the key pressed for at least 2s set point change mode is entered: the set point is displayed and the LEDs of the first and third digits blink. To change the value use the “UP” and “DOWN” keys. The new value can be stored either by pressing the “SET” key (the instrument restores temperature display) or by waiting the exit time-out to expire (15s).

▲ (UP): in programming mode or in “Function Menu” it browses the parameter codes or increases the value of the displayed variable. Hold pressed for a faster change.

TO START A FAST FREEZING CYCLE: in normal operation, by holding it pressed for 3s the fast freezing cycle is started. Such cycle can be interrupted by holding the “UP” key pressed for 3s.

▼ (DOWN): in programming mode or in “Function Menu” it browses the parameter codes or decreases the value of the displayed variable. Hold pressed for a faster change.

TO REVERSE THE STATE OF THE AUXILIARY OUTPUT: in model XR672C, by holding it pressed for 3s the auxiliary output state is inverted.

AUX TO REVERSE THE STATE OF THE AUXILIARY OUTPUT: Only model XR675D: by holding it pressed for 3s the state of the auxiliary output is reversed.

❄ **TO START A MANUAL DEFROST:** by holding it pressed for 3s the defrost cycle is started

KEY COMBINATIONS:

▲+ ▼ **TO UNLOCK THE KEYBOARD:** when held pressed for 3s the keyboard is unlocked (see “LOC” function).

SET + ▼ **TO ENTER ON FUNCTION MENU:** when held pressed for 3s the Function Menu is entered.

SET + ▲ **TO RETURN TO THE ROOM TEMPERATURE DISPLAY:** programming end, return to the room temperature display.